

# How to get Gas & Electricity Meter Readings from your Freedom Unit

## Freedom Unit

**Dual Fuel Supply**  
Gas - Press **2** 11 times  
Electricity - Press **1** 11 times

**Electricity Only Supply**  
Press **9** once

**Meter Reading!**

**How To Key In The Vend Code**  
(1) Press the '\*' key.  
(2) Press button '1' for Electricity or '2' for Gas.  
(3) Enter the Vend Code carefully via the numeric keypad.  
(4) Correct errors by pressing '\*'.  
(5) When complete, press the '#' button to confirm.  
For help on displays see booklet.

## ...or directly from the meters

**Electricity Meter Reading!**

**Gas Meter Reading!**

Press **4** once